 


PHILIPS

AZ 6880 Portable Video CD Player

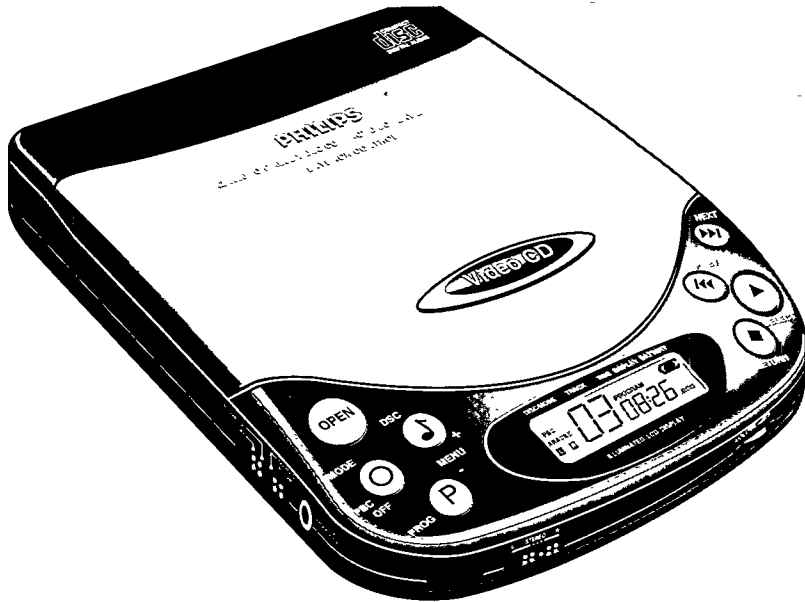

Instructions for use
Mode d'emploi
Instrucciones de manejo
Bedienungsanleitung
Gebruiksaanwijzing
Istruzioni per l'uso
Manual de utilização
Brugsanvisning
Bruksanvisning
Käyttöohje
Οδηγίες χρήσεως



PHILIPS

**CLASS 1
LASER PRODUCT**

English page 4

English

Français page 15

Français

Español página 28

Español

Deutsch Seite 41

Deutsch

Nederlands pagina 55

Nederlands

Italiano pagina 66

Italiano

Portugûespágina 78

Portugûes

Dansk side 89

Dansk

Svenska sida 101

Svenska

Suomi sivu 112

Suomi

Ἑλληνικάσελίδα 125

Ἑλληνικά

1. GENERAL

CONTENTS

1. GENERAL.....	4
2. INSTALLATION	5-6
3. CONTROLS.....	7-8
4. OPERATION.....	9-13
Audio CDs.....	9-11
Karaoke CDs	10
Video CDs/CD I discs.....	12-13
5. MAINTENANCE.....	13
6. TROUBLESHOOTING.....	14

INTRODUCTION

Thank you for selecting the Philips AZ6880 Portable Video Compact Disc Player. The AZ6880 can play back following types of discs:



- Audio CDs.
- Video CDs *with* playback control (PBC):
Version 2.0 discs. For playback of moving pictures and for displaying menu screens on TV when using interactive software.
- Video CDs *without* playback control (PBC):
Version 1.1 discs. For playback of moving pictures.
- CD-I Digital Video CDs.

RECYCLING

Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.

- All redundant packaging material has been omitted. We have done our utmost to make the packaging easy separable into three mono-materials:
 - cardboard (box)
 - expandable polystyrene (buffer)
 - polyethylene (bags, protective foam sheet)
- Your set consists of materials which can be recycled if disassembled by a specialized company.
- Do not dispose of exhausted batteries with your household waste.

ACCESSORIES

- Accessories already supplied with the set**
- AY 3770 - wireless credit card remote control with battery.
 - SBC 3304 - headphones.
 - SBC 6619 - mains adaptor.
 - SBC 1059 - signal lead
 - AY 3460 - A/V connection lead.
 - AY 3461 - SCART adaptor lead (*Europe only*).
- Accessories available from your dealer**
- SBC 1085 - signal lead with 3.5 mm socket plug at both ends.
 - SBC 3557 MkII - car accessory kit (adaptor cassette and voltage convertor).

The type plate is located at the bottom of the set.


This product complies with the radio interference requirements of the European Community.

CAUTION!

LASER RADIATION WHEN OPEN AND WHEN INTERLOCKS ARE DEFEATED. AVOID EXPOSURE TO BEAM.

2. INSTALLATION

English

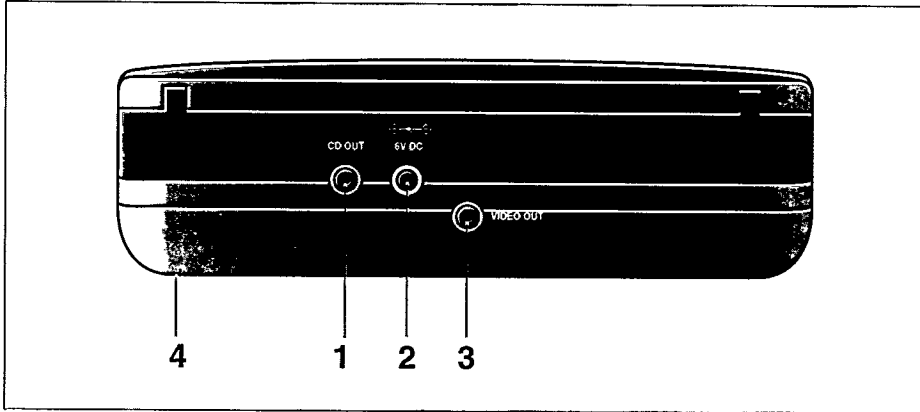


CONNECTIONS

- 1 CD OUT** – For connecting the set to a HiFi installation or a stereo TV.
- 2 6 V DC** – For connecting the set to the mains supply.
- 3 VIDEO OUT** – For connecting the set to your TV.
- 4 Battery compartment**

POWER SUPPLY

Battery supply


- Open the battery compartment and insert 4 rechargeable Nickel-Cadmium or alkaline batteries (type R6, UM3 or AA).
The batteries cannot be recharged inside the set.
- Remove the batteries if exhausted or if they will not be used again for a long period.
- The battery supply is switched off when the set is connected to the mains.
- To change over to battery supply, disconnect the adapter from the wall socket.

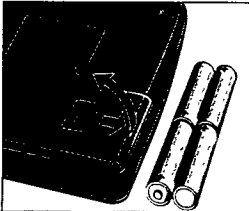

The battery condition will be indicated in the top right corner of the display:
☹ flashing – weak batteries.
☹ flashing – empty batteries (b A t t will also appear).


Mains supply

- Check if the mains voltage, as indicated on the adapter corresponds to your local mains voltage. If it does not, consult your dealer or service organization.
- If the adapter is equipped with a voltage selector, set this selector to the local mains voltage.
- Connect the supplied mains adapter (6 V/-600 mA Direct Current plus-pole to the centre pin) to the player's 6 V DC socket and to the wall outlet.
- Always disconnect the adapter if you are not using it.
- To disconnect the set from the mains completely, withdraw the adapter from the wall socket.

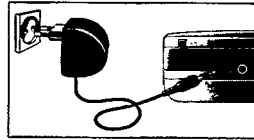

CONNECTING HEADPHONES

- Connect the supplied headphones (16-32 ohms/3.5mm socket plug) with the PHONES Ⓜ socket.
- Use this socket also to connect:
 - mini-loudspeakers (optional);
 - adapter cassette from car accessory kit SBC 3557 II (optional);
 - signal lead SBC 1085 (optional), see accessories.

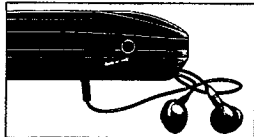

2. INSTALLATION


Use your head when using headphones

Hearing safety: Do not play your headphones at a high volume. Hearing experts advise that continuous use at high volume can permanently damage hearing.

Traffic safety: Do not use headphones while driving a vehicle. It may create a hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.


CONNECTION TO A HIFI SYSTEM

- Turn down the volume of your stereo system.
- Connect the supplied signal lead SBC1059 to the CD OUT socket of the CD player and to the input sockets CD IN, AUX(iliary) or LINE IN of the other set (amplifier, receiver, radio cassette recorder etc.).
- Adjust the sound using the controls of the stereo system.

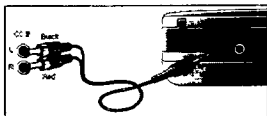


CONNECTION TO A TV

 Connection to the Cinch input of a stereo TV

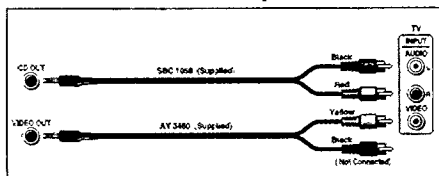


- Insert the single plug of the supplied audio lead SBC 1059 into the CD OUT socket.
- Insert the black plug into the 'L' socket of the AUDIO INPUT of your TV.
- Insert the red plug into the 'R' socket of the AUDIO INPUT of your TV.
- Insert the single plug of the supplied A/V connection lead AY 3460 into the VIDEO OUT socket.
- Insert the yellow plug into the VIDEO INPUT of your TV.
- The black plug will not be connected.
- Select the color system (NTSC or PAL) using the COLOR SYSTEM switch.

Connection to the Cinch input of a monaural TV

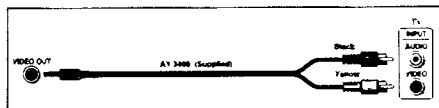

- Insert the single plug of the supplied A/V connection lead AY 3460 into the VIDEO OUT socket.
- Insert the black plug into the AUDIO INPUT of your TV.
- Insert the yellow plug into the VIDEO INPUT of your TV.
- Select the colour system (NTSC or PAL) using the COLOR SYSTEM switch.


Connection to the SCART input of a TV (Europe only)

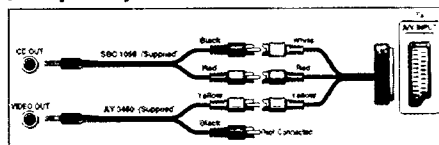

- Insert the single plug of the supplied audio lead SBC 1059 into the CD OUT socket.
- Insert the single plug of the supplied A/V connection lead AY 3460 into the VIDEO OUT socket.
- Insert the red and black plug of the audio lead and the red and yellow plug of the A/V connection lead into the sockets of the supplied SCART adapter lead AY3461 (Europe only). The black plug of the A/V connection lead will not be connected.
- Insert the SCART adapter lead into the A/V input of your TV.
- Select the colour system (NTSC or PAL) using the COLOR SYSTEM switch.


INSERTING THE BATTERY OF THE REMOTE CONTROL

- Remove the rear cover.
- Insert a battery (CR2025).
- Close the cover.
- The life of the battery is about 1 year.
- Remove the battery when it has run down or if it will not be used for a long period.

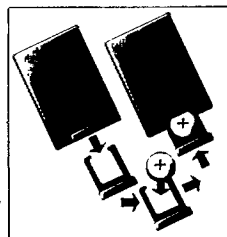

3. CONTROLS

English

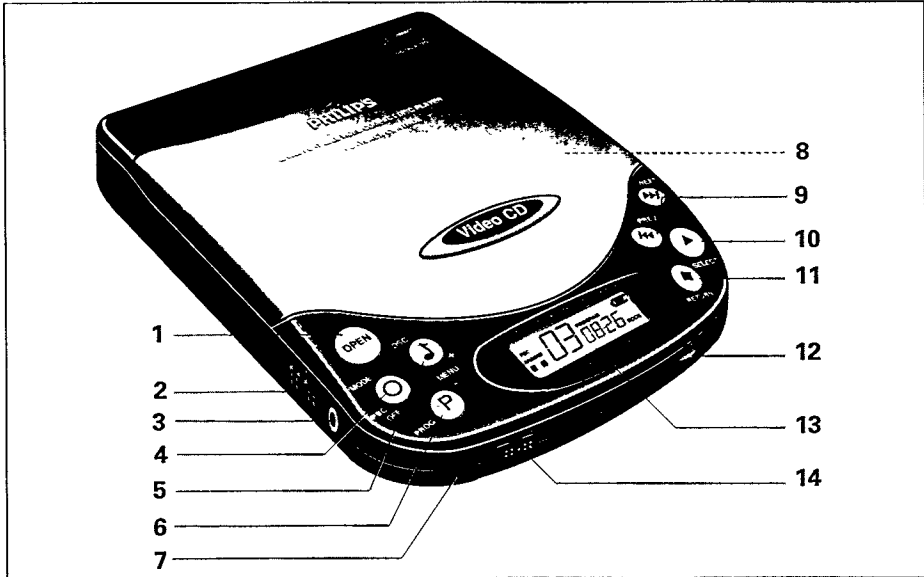


CONTROLS

- 1 OPEN** – Opening the CD compartment.
- 2 RESUME/HOLD**
 - Resuming play (RESUME).
 - Blocking all buttons (HOLD).
- 3 PHONES** – For connecting headphones, mini loudspeakers, a cassette adapter or a signal lead.
- 4 MODE/PBC OFF**
 - Selecting the different play modes: SHUFFLE → REPEAT/SHUFFLE → REPEAT → KARAOKE → OFF.
 - Cancelling the PBC function.
- 5 DSC (Digital Sound Control)/MENU +**
 - Selecting the different sound settings when listening with headphones: CAR → JAZZ → ROCK → OFF.
 - Increasing the item number in the menu when playing a Video CD with playback control (PBC).
- 6 PROG(ram)/MENU -**
 - Storing tracks in a program.
 - Checking a program.
 - Decreasing the item number in the menu when playing a Video CD with playback control (PBC).
- 7 IR (Infra Red) sensor** – Receives the signals from the remote control.
- 8 Colour system selector** (inside the CD compartment) – Selecting the required colour system (NTSC or PAL).
- 9 |◀◀ PREV(ious)/NEXT ▶▶|**
 - Selecting a next or previous track.
 - Selecting a track to start play with.
 - Selecting track numbers when compiling a program.
 - Searching for a particular passage.
 - Going back to the previous or next page of the menu when playing a Video CD with playback control (PBC).
- 10 ▶ SELECT**
 - Starting playback.
 - Selecting the desired item in the menu screen when playing a Video CD with playback control (PBC).
- 11 ■ RETURN**
 - Stopping playback.
 - Deleting various settings.
 - Switching off the CD player.
 - Going back to the previous menu when playing a Video CD with playback control (PBC).
- 12 VOLUME** – Adjusting the volume when listening with headphones.
- 13 DISPLAY** – Informs you about the functioning of the CD player.
- 14 AUDIO MODE** – Selecting the audio channel when playing a karaoke disc (a multiplex disc).

3. CONTROLS

English

REMOTE CONTROL

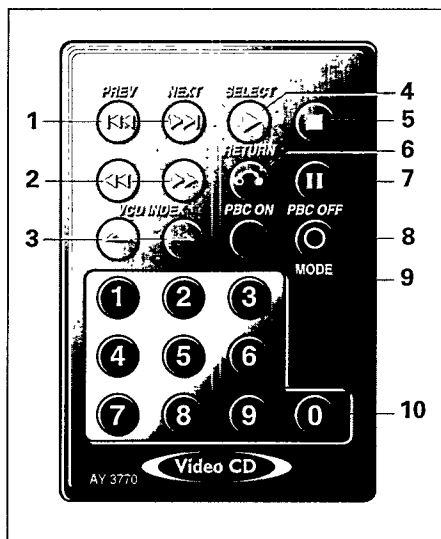

- 1 **◀◀ PREVIOUS/NEXT ▶▶**
 - Selecting a next or previous track.
 - Selecting a track to start play with.
 - Selecting track numbers when compiling a program.
 - Going back to the previous or next page of the menu when playing a Video CD with playback control (PBC).
- 2 **◀▶** - Searching for a particular passage.
- 3 **V-CD INDEX** - Selecting another index number when playing an indexed Video CD.
- 4 **▶ SELECT**
 - Starting playback.
 - Selecting the desired item in the menu screen when playing a Video CD with playback control (PBC).
- 5 **■**
 - Stopping playback.
 - Deleting various settings.
 - Switching off the CD player.
- 6 **RETURN**
 - Going back to the previous menu when playing a Video CD with playback control (PBC).
- 7 **||**
 - Interrupting playback.
 - Resuming playback in PAUSE mode.

8 MODE/PBC OFF


- Selecting the different play modes: SHUFFLE → REPEAT/SHUFFLE → REPEAT → KARAOKE → OFF.
- Cancelling the PBC function.

9 PBC ON - Activating the PBC function.

10 1-0 digit keys

- Selecting tracks you wish to play.
- Selecting a track to start play with.
- Selecting track numbers when compiling a program.
- Selecting an item number of menu screen when playing a Video CD with playback control (PBC).

DISPLAY

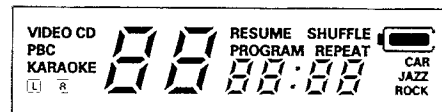

VIDEO CD

Lights up when a video CD is loaded.

PBC

Lights up when playback control is activated.

KARAOKE - SHUFFLE - REPEAT

Indicate the selected play mode.



Indicate the selected channel in audio mode.

RESUME

Lights up when the resume function is activated.

PROGRAM

Lights up during programming and during playback of a program.

CAR - JAZZ - ROCK

Indicate the selected DSC (Digital Sound Control) setting.






Indicates the battery condition.

4. OPERATION - Audio CDs

PLAYBACK (▶ SELECT)

- To take the CD out of its box easily, press the centre spindle while lifting the CD.
- Always hold the CD at the edge and always store it in its box after use with the label facing up.
- Press OPEN to open the CD compartment.
- Insert an audio CD, printed side facing up.
Gently push the CD centre so it will fit onto the hub.
- Close the cover by pushing on its left hand-side.
 - The CD-player scans the contents list of the CD.
After that, the display shows the total number of tracks and the total playing time of the CD.
- Press ▶ SELECT to start play.
 - The display shows the current track number and its elapsed playing time.
 - Play will stop after the last track has been played.
- Press OPEN to open the CD compartment and take out the CD; hold the CD by its edge and press the hub gently.

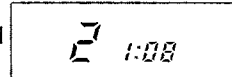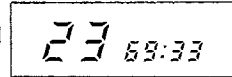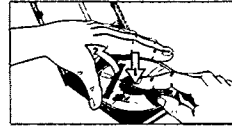

ADJUSTING VOLUME AND SOUND (VOLUME and DSC)

Only when listening with headphones!

- Adjust the volume with the VOLUME control.
- Select the required sound setting (CAR → JAZZ → ROCK → OFF), using the DSC (Digital Sound Control) button.
- When the set is connected to a HiFi system or a TV, adjust the volume and sound on the system or the TV.

GOING BACK TO THE BEGINNING OF A TRACK (◀◀ PREV)

- During play, press ◀◀ PREV *once* briefly.
 - The music stops and the current track starts again from the beginning.

SELECTING ANOTHER TRACK DURING PLAY (1-0 or ◀◀ PREV and NEXT ▶▶)

- Press ◀◀ PREV or NEXT ▶▶ until the required track number appears on the display.
 - The music stops and, a moment later, the selected track begins to play.

You can also enter the required number *directly* by using the 1-0 digit buttons on the remote control. Numbers consisting of two figures must be keyed in **within 2 seconds**.

SEARCHING FOR A PASSAGE DURING PLAY (◀◀◀ PREV and NEXT ▶▶▶)

- Hold ◀◀◀ PREV pressed down (or press ◀◀) to search backwards to the beginning.
- Hold NEXT ▶▶▶ pressed down (or press ▶▶) to search forwards to the end.

The searching speed is determined by how long a key is pressed:

- the first 2 seconds fairly slowly, with sound;
- then at the maximum speed, with no sound.

Note: In the SHUFFLE and KARAOKE modes and when playing a program, searching is only possible within the track being played.

STARTING WITH A PARTICULAR TRACK (1-0 or ◀◀◀ PREV/NEXT ▶▶▶ and ▶ SELECT)

- Press ◀◀◀ PREV or NEXT ▶▶▶ until the required track number appears on the display.
- Press ▶ SELECT.
 - Play starts from the selected track.

You can also enter the required number *directly* by using the 1-0 digit buttons on the remote control. Numbers consisting of two figures must be keyed in **within 2 seconds**.

4. OPERATION - Audio CDs

INTERRUPTING PLAY (II)

- For brief interruptions, press **II** on the remote control.
- Playback stops and the current time starts flashing on the display.
- To resume play, press **▶ SELECT** or **II** on the remote control again.

Note: If no button is pressed for 10 minutes, the set will switch off automatically.

STOPPING PLAY (■ RETURN)

- Press **■ RETURN**.
- Play stops and the display shows the total number of tracks and the total playing time of the CD.
- If you press **■ RETURN** again, the set will be switched off.

Note: If no button is pressed for 10 minutes, the set will be switched off automatically.

Resuming play

By activating the RESUME function you can resume playback from where it was stopped.

- Activate the RESUME function by sliding the RESUME/HOLD switch to the middle.
- RESUME will appear in the display.
- If you now stop play by pressing **■ RETURN**, the last played position will be stored.
- Press **▶ SELECT** to resume play.
- Playback starts from where it was stopped.

Note: Do not open the compartment otherwise the information about the last played position will be lost.

SELECTING DIFFERENT PLAY MODES (MODE/PBC OFF)

By pressing the MODE/PBC OFF button, you can successively activate the following play modes:

- SHUFFLE: the tracks will be played in random order. Once all tracks have been played, play stops.
- SHUFFLE/REPEAT the tracks will be repeated in random order.
- REPEAT: the tracks will be repeated in the order in which they appear on the CD.
- KARAOKE: the player will go into PAUSE mode after each track.

If you select a PLAY mode during play it will be executed immediately.

If you select a PLAY mode in STOP mode, you first have to press **▶ SELECT** to start playback.

DEACTIVATING ALL BUTTONS (HOLD)

- Activate the HOLD function by sliding the RESUME/HOLD switch to the extreme right.
- Now all buttons are deactivated (except the VOLUME and the slider switches). The CD compartment cannot be opened.
- If you press a button (except OPEN), the display will show HOLD.
- To cancel the HOLD function, slide the RESUME/HOLD switch back to the OFF position.

PLAYBACK OF KARAOKE DISCS (▶ SELECT)

- Select KARAOKE mode with the MODE button.
- Select the required audio channel by sliding the AUDIO MODE switch to:
 - **[R]**: if you wish to hear vocals only;
 - **[L]**: if you wish to hear music only;
 - STEREO: if you wish to hear both channels.
- The display will show the selected audio mode.
- Press **▶ SELECT** to start playback.
- After a track has been played, the player will go into PAUSE mode.
- Press **▶ SELECT** to play the next track.

Notes

- In case of programmed play (see next page) a track will be erased from the programme as soon as it has been played.
- On some types of discs, channel selection is different. For this, refer to the instructions supplied with the disc.
- Always set the AUDIO MODE switch back to STEREO if you wish to play other types of discs.


4. OPERATION - Audio CDs

English

STORING A PROGRAM (PROG and ◀◀ PREV/NEXT ▶▶)



By programming the player you can play up to 20 tracks in any desired order. A program can be stored before or during play.

- Press ◀◀ PREV or NEXT ▶▶ until the first number you wish to store appears on the display.
- Press PROG(ram).
- PROGRAM lights up; the track has now been stored in the player memory.
- The display shows the total number of programmed tracks.
- Select and store in this way all desired track numbers.

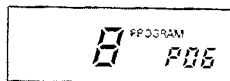

Notes

- FULL will light up if you exceed the maximum of 20 tracks.
- You can also enter the required number *directly* by using the 1-0 digit buttons on the remote control. Numbers consisting of two figures must be keyed in **within 2 seconds**.
- SELECT will light up if you press PROG while no track has been selected.

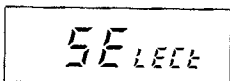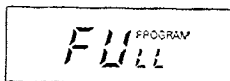

CHECKING THE PROGRAM (PROG)

- In STOP mode, keep PROG pressed for more than 2 seconds.
- All programmed track numbers will flash in sequence for a few seconds.

PLAYING THE PROGRAM (▶ SELECT)

- If you stored the program in STOP mode, press ▶ SELECT.
If you stored the program during play, *first* press ■ RETURN and *then* press ▶ SELECT.
- Play starts with the first track of the program.
- The program will be played in the selected PLAY mode (SHUFFLE, REPEAT/SHUFFLE or REPEAT).
- After the last track has been played, play will stop.

ERASING THE PROGRAM

(■ RETURN or OPEN)

In STOP mode

- Press OPEN or ■ RETURN.

During play

- Press OPEN or ■ RETURN (*twice*).

- The program has now been erased.


4. OPERATION – Video CDs – CDI discs

PLAYBACK ► SELECT

You can play Video CDs *with* PBC (Playback Control) as well as Video CDs *without* PBC. CDI discs are played back in the same manner as Video CDs without PBC

Preparation

- Make sure that the player is connected to the TV correctly.
- To take the CD out of its box easily, press the centre spindle while lifting the CD.
- Always hold the CD at the edge and always store it in its box after use with the label facing up.
- Press OPEN to open the CD compartment.
- Insert a Video CD, printed side facing up
- Gently push the CD center so it will fit onto the hub.
- Close the cover by pushing on its left hand side.

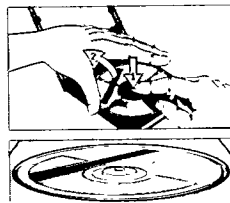



Playback of a Video CD with PBC

- After inserting the CD and closing the CD compartment, the display shows VIDEO CD, PBC and $\frac{P}{b} \frac{L}{L}$.
- Press ► SELECT to start play.
- The menu screen appears on the TV screen.
- Select the required item number using DSC/MENU + or PROG/MENU –.
- Then press ► SELECT again.
- You can also enter the required item number *directly* with the 1-0 digit keys on the remote control.
- Adjust the volume with the VOLUME control on your TV.

Note: The menu structure (and therefore the information on the TV screen) depends on the Video CD software. For this refer to the instructions supplied with the CD.

Playback of a Video CD without PBC/Playback of a CDI disc

- After inserting the disc and closing the CD compartment, the display shows VIDEO CD, the total number of tracks and the total playing time.
- Press ► SELECT to start play.
- The display shows the number of the current track and its elapsed playing time.
- Adjust the volume with the VOLUME control on your TV.

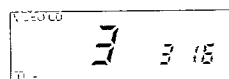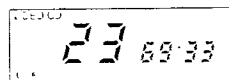

Note: For other functions see 'OPERATION of audio CDs'. The number of functions available depends on the disc's software.

INTERRUPTING PLAY (II)

- For brief interruptions, press II on the remote control.
- To resume play, press ► SELECT or II on the remote control again.

Note: The set will switch off automatically if no button is pressed for 10 minutes.

STOPPING PLAY (■ RETURN)

- Hold ■ RETURN pressed down or press ■ on the remote control to stop playback.
- If you press ■ RETURN or ■ again, the set will be switched off.

Note: The set will switch off automatically if no button is pressed for 10 minutes.

OTHER POSSIBILITIES (PBC discs only)

Selecting the previous menu

- You can return to the previous menu by pressing **■** RETURN *briefly* or by pressing RETURN on the remote control.

Selecting another page

- You can select a next or previous page by pressing **I◀◀** PREV or NEXT **▶▶I**.

Selecting index numbers

- If the tracks on a CD have index numbers you can select a next or previous index number by using the **◀** V-CD INDEX **▶** buttons on the remote control.

Cancelling the PBC function

By cancelling the PBC function you can operate the Video CD as an Audio CD.

- Press MODE/PBC OFF.
 - Playback stops and the PBC function is cancelled. The following functions are now accessible (*see the instructions in chapter 4, Operation – Audio CDs*):
 - Adjusting the sound (DSC);
 - Going back to the beginning of a track (**I◀◀** PREV);
 - Selecting another track during play (1-0 or **I◀◀** PREV and NEXT **▶▶I**);
 - Searching for a passage during play, without sound (**I◀◀** PREV/NEXT **▶▶I**);
 - Starting with a particular track (1-0 or **I◀◀** PREV/NEXT **▶▶I**);
 - Selecting different PLAY modes (MODE);
 - Storing a program (PROG).
- Press PBC ON on the remote control again if you wish to resume play with PBC. You can also open the CD compartment and close it again.

REMOVING THE VIDEO CD/CDI disc

Video CDs without PBC and CDI discs


- Play will stop after the last track has been played.

Video CDs with PBC


- First stop playback with **■** RETURN or **■** on the remote control.
- Press OPEN to open the CD compartment and take out the CD; hold the CD by its edge and press the hub gently.

MAINTENANCE

- The mechanical parts of the CD player contain self-lubricating bearings and must not be oiled or lubricated.
- A chamois leather slightly moistened with water is sufficient for cleaning the housing.
- Do not use cleaning agents as these may harm the housing.
- Do not leave the set, batteries or CDs for any length of time in direct sunlight or other places where high temperatures can occur, such as in the vicinity of heating apparatus.
- Do not expose the set, batteries, CDs or cassettes to humidity or rain.
- The lens (⊗) must not be cleaned.

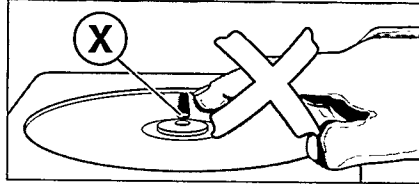

- The lens may cloud over if the CD player is moved from cold to warm surroundings. The CD player will not start. Do not clean the lens, but give the player some time to acclimatise.
- You can clean the CD player with a soft and slightly dampened chamois leather. Do not use any cleaning agents as they may have a corrosive effect.
- Always pick up the CD by the edge and put it back in its box after use.
- To clean the CD, wipe it off in a straight line from the center towards the edge using a soft, lint-free cloth. A cleaning agent may damage the disc!

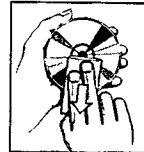

6. TROUBLESHOOTING

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING

Under no circumstances should you try to repair the set yourself, as this would invalidate the guarantee.

PROBLEM

- POSSIBLE CAUSE
- REMEDY

No power or no CD play start

- Batteries incorrectly inserted.
 - Insert the batteries correctly.
- Batteries are empty.
 - Change/recharge the batteries.
- Contact pins are dirty.
 - Clean them with a cloth.
- Mains adaptor is not connected correctly.
 - Connect the adaptor securely.

CD play does not start or interrupts

- CD compartment is not properly closed.
 - Close the compartment securely.
- The HOLD function is activated.
 - Switch off the HOLD function.
- Moisture condensation on the lens.
 - Leave the player in a warm place until the moisture evaporates.
- CD is not or is incorrectly inserted.
 - Insert a CD, label side up.
- CD is badly scratched.
 - Use another CD.
- CD is dirty.
 - Clean the CD.

CD compartment cannot be opened

- The HOLD function is activated.
 - Switch off the HOLD function.

Play does not start from the first track

- RESUME, SHUFFLE or PROGRAM is activated.
 - Switch off the RESUME, the HOLD or the SHUFFLE function or clear the program.

No sound or bad sound quality

- PAUSE is activated.
 - Press ► SELECT.
- Loose or incorrect connections.
 - Check connections.
- Volume is not turned up.
 - Adjust the volume.
- Headphone plug is dirty.
 - Clean the headphone plug.
- Strong magnetic fields near the CD player.
 - Change the player's position or connections.

In-car use

- Strong vibrations.
 - Find another place for the set.
- Temperatures inside the car are too high/low.
 - Let the CD player acclimatize.
- Cigarette lighter/socket is dirty.
 - Clean the cigarette lighter/socket.

No volume and DSC

- Volume and DSC only work when headphones are connected.
 - Connect headphones (or the car radio) to the PHONES socket.

No picture on the TV screen

- No proper connection to the TV.
 - Connect the lead properly.
- Incorrect input is selected on the TV.
 - Select the correct input.
- Incorrect colour system is selected.
 - Select the correct color system using the color system switch.

Remote control does not function

- Battery is empty.
 - Replace the battery.
- Distance to the set is too large (more than 4 meters).
 - Reduce the distance.

AZ 6880 - Portable Video CD Player

English

English page 4

Français

Français page 15

Español

Español página 28

Deutsch

Deutsch Seite 41

Nederlands

Nederlands pagina 55

Italiano

Italiano pagina 66

Portugues

Portugues página 78

Dansk

Dansk side 89

Svenska

Svenska sida 101

Suomi

Suomi sivu 112

Ελληνικά

Ελληνικάσελίδα 125

